


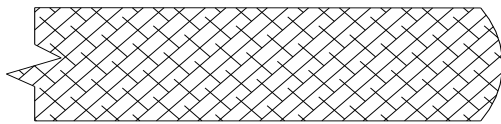


3cm Natural/Engineered Stone Edges


- * Standard Edge
- ** \$10/Lineal Foot
- *** \$15/Lineal Foot




Crescent *

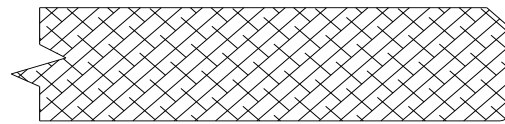


Top Bevel *

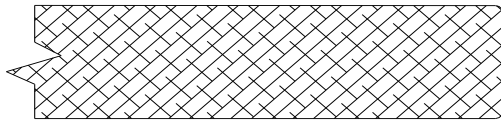


Flat Polish *

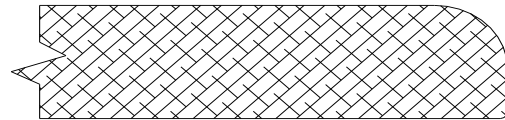


$\frac{5}{8}$ " Radius Top Eased Bottom *

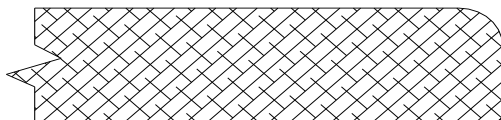


$\frac{3}{8}$ " Radius Top Eased Bottom *

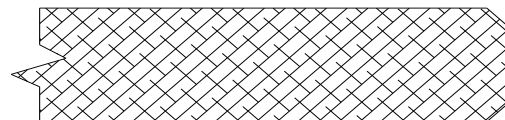

Double Bevel **

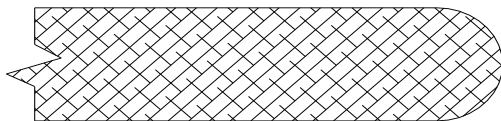

Full Bullnose *

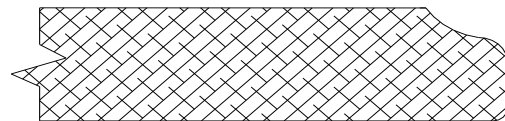


Ogee ***




2cm Natural/Engineered Stone Edges


- * Standard Edge
- ** \$15/Lineal Foot




* Flat Polish



* $\frac{3}{8}$ " Radius Top Eased Bottom




* Crescent




* $\frac{5}{8}$ " Radius Top Eased Bottom



* Full Bullnose



* Top Bevel



** Ogee